
HYPNOTEK

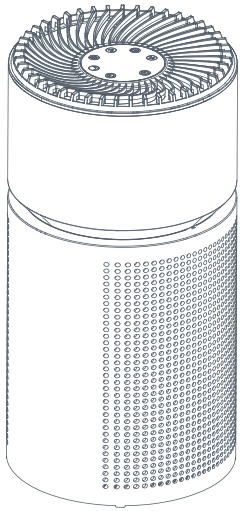

User Manual

Bright Pro Air Purifier

Please read this instruction manual carefully before using the product and keep it in a safe place for future reference.

Product Specifications

Product Name	Air Purifier & Humidifier
Model	HYP-PR-AP01
Power	38W
Input Voltage & Frequency	AC100-240V, 50/60Hz
Product Dimensions	D252×H496mm

Safety Precautions

WARNING: Risk of Electric Shock

Please read this manual carefully before using the product to help prevent short circuits, electric shock, fire, personal injury, and other hazards. Always operate the product as described in this manual.
To reduce the risk of electric shock, do not attempt to service the product except as described in the Cleaning and Maintenance section.

Please read all safety precautions below before using this product.

1. Use this product only with AC100–240V, 50/60Hz power supply.
2. Do not place the power cord under carpets or other coverings. Keep the cord away from walkways and areas where it may be pinched or cause tripping.
3. Do not use this product in greasy environments (such as kitchens). This product is not designed to filter oil fumes or grease from the air.
4. Do not use the air purifier in bathrooms or other high–humidity environments Do not use it near fireplaces, flammable gases, or combustible materials.
5. Unplug the product when not in use and before moving, cleaning, or installing/removing any parts.
6. Only operate the product after it is fully assembled and installed correctly.
7. Turn off the unit before unplugging it.
8. Failure to service the product according to the instructions in this manual may avoid the warranty and may result in personal injury or product damage.
9. Do not place the power cord on hot surfaces. If the cord or plug is damaged, stop using the product and contact an authorized service center for inspection or repair.
10. Do not pull the power cord or drag the product by the cord. Do not run the cord over sharp edges, uneven surfaces, or corners.
11. To unplug the product, grasp the plug and pull it gently from the outlet.
12. Never unplug the product by pulling on the power cord.
13. Keep foreign objects, including fingers, hair, loose clothing, and jewelry, away from the air outlet during operation.
14. Do not touch the product or plug with wet hands.
15. Children should use this product only under adult supervision.


Product Principle and Function Overview


How the Product Works

The filter captures and retains airborne particles using high-efficiency filtration technology.

Product Functions

1. **Operating Modes:**
   4fan speeds, Sleep Mode, and AUTO Mode.
2. **Sleep Mode:**
   Operates at the lowest speed and turns off the panel backlight (except the Sleep indicator).
3. **AUTO Mode:**
   Air quality indicators display different colors (Red / Orange / Blue), while the screen shows the PM2.5 value in real time.
4. **Timer Function:**
   Adjustable from 1 to 12 hours.
5. **Negative Ion Function.**
6. **UV Light Function:**
   Helps reduce odors and supports sterilization.
7. **Filter Replacement Reminder and Reset Function.**
8. **Humidification Function:**
   Evaporative humidification with a 3.5 L water tank and transparent water-level window.

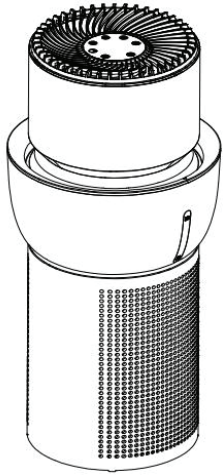

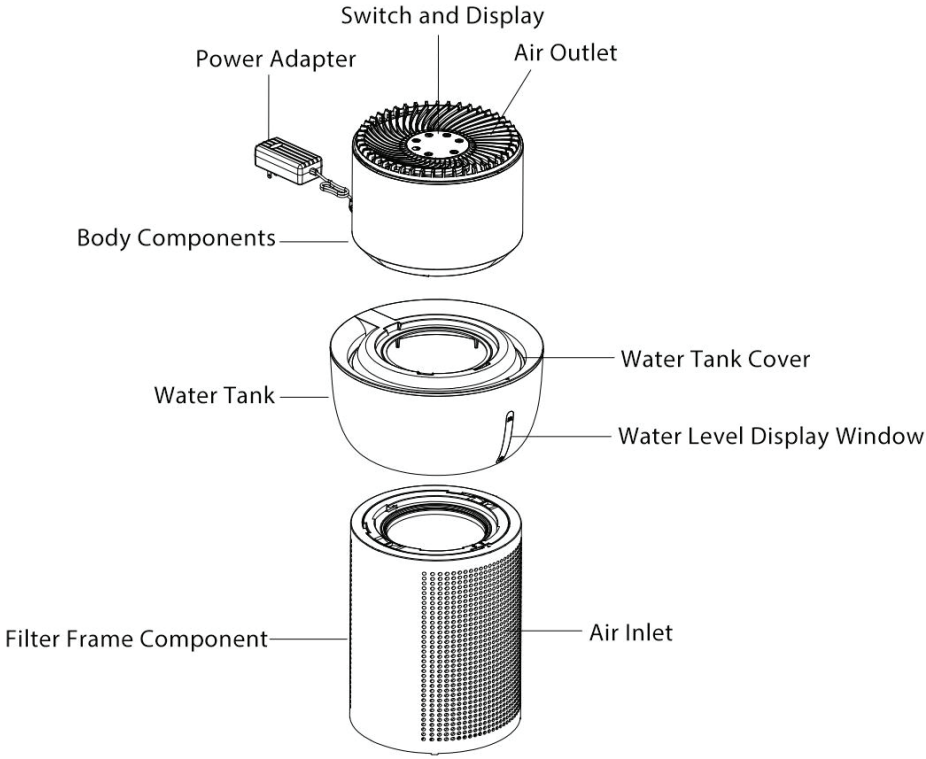

Product Instructions

1. Preparation Before Use

1. Before use, remove the filter and place it on the floor with the front side facing you.
2. Align the front of the water tank with the front of the filter-frame assembly. Rotate the water tank slightly left and right until it fits completely into the filter-frame assembly. Then rotate the water tank to the left until it locks into place.
3. Align the front of the main unit with the front of the water tank. Rotate the main unit slightly left and right until it fits securely onto the water tank cover.
4. Fill the water tank. Do not exceed the maximum water level mark.
5. Insert the DC plug of the supplied power adapter into the DC socket on the unit.
6. Plug the power adapter into an AC100–240V,50/60 Hz outlet. The unit will enter standby mode.

Note:

If you do not plan to use the humidification function, you may assemble the main unit directly onto the filter-frame assembly. Align the front of the main unit with the front of the filter-frame assembly and rotate slightly left and right until fully seated. Then rotate the main unit to the left until it locks into place.

Function Keys



Details are described in the table below.

Function Keys	Operation	Specific Description	Remark
	Power ON/OFF	1) Standby state, press the ON/OFF button to enter the working state. 2) By default, the machine will work in AUTO mode. 3) In the working state, press the ON/OFF button to enter the standby state, all indicators and icons are off, and all functions are stopped.	1) When the machine is turned on, the buzzer will sound two beeps . 2) When the machine is turned off, the buzzer will sound beeps once. 3) When power is on, there is white light; and red light when standby state
	Auto Mode	1) In the power-on state, press the Auto mode button to enter or exit Auto mode. And the motor gear is controlled by the program of the machine. 2) In Auto mode, press the Speed Button to exit Auto mode, and the motor speed will be at gear 1.	In Auto mode, the motor gear Is determined by air quality detected by the sensor. 1) Air Quality is good, motor run at low speed. 2) Air Quality is fair, motor run at Medium speed. 3) Air Quality is bad, motor run at high speed.
	Fan Speed	1) Press the speed icon, the speed will run at 1 st gear--2nd gear--3rd gear--4th gear--1 st gear, continuously cycle	1) Each time you press the button, There will be a buzzer sound(beep).

	Timer	1) In the power-on state, press the TIMER button, and the "TIMER" icon will light up 2) The digital screen displays the timing setting interface, and the timing number is pressed: 1 – 2 – 3 – … 12 – Cancel–1–2… cycle; after setting, it will return to the display PM2.5 interface after 3 seconds. Then the digital part of the digital screen alternately displays the PM2.5 value and the timing value. The interval time is 5 seconds. 3) When the countdown is turned off, the time display will decrease in units of 1 hour until it is turned off;	1) Each time you press the button, There will be a buzzer sound(beep).
	Sleep Mode	1) In the power-on state, press the SLEEP button to enter the night mode, and at the same time the SLEEP icon is on (half-bright display), and other icons on the display are off (including the air quality display light); in the night mode, the wind speed maintains 1st gear operation. 2) Press it again to cancel the night mode, the wind speed will keep running at the first gear, and other functions will remain unchanged	1) Each time you press the button, There will be a buzzer sound (beep). 2) Press the Sleep mode button, to enter or exit the night mode. 3) In night mode, if the filter reaches its lifetime, the filter indicator light remains half-lit; and the filter indicator light will turn to normal brightness after Exiting night mode.
	Negative Ions	1) In power-on state, press the button to turn on negative ions, and the icon lights up; press it again to turn off negative ions, and the icon light turns off.	1) Each time you press the button, there will be a buzzer sound (beep).
	UVC Light	1) In power-on state, press the button to turn on UVC light, and the icon lights up; press it again to turn off the UVC light.	1) Each time you press the button, there will be a buzzer sound (beep).
	Wi-Fi Pairing	1) In the power-on state, press and hold the sleep button for 3 seconds to turn on and off the WI-FI pairing function. When the Wi-Fi icon on the digital screen is always on, it indicates that it has connected to the cloud service center. When the icon flashes quickly (on for 0.25 seconds, off for 0.25 seconds), indicates pairing is in progress. If the pairing is not successful within 120 seconds, the icon will turn off. 2) When the Wi-Fi icon is always on a flash fast, press and hold the sleep button for 3 seconds to turn off the Wi-Fi function. (The icon will turn off).	1) Each time you press the button, there will be a buzzer sound (beep).
	Filter Reset	1) When the accumulating working time of the machine reaches 3000 hours, the filter indicator is always on (red light) to remind the filter need to be replaced. 2) When the filter light is on, please press the UV and negative ions button for 3seconds to turn off the light. At same time, you could hear the buzzer sound beeps for three times, and the filter indicator will flash 3 times and then turn off (each time flash for 0.5 second), after this, the filter lifetime will be re accumulated.	1) The accumulating lifetime of filter can t be reset when The machine is turned off. 2) When the filter indicator light is not on; it can t be reset. 3) When the filter indicator is on, other functions of the Machine works as usual.

Notes:


– Each button press is accompanied by a beep sound.
– In Sleep Mode, if the filter reaches its lifetime, the filter indicator remains dimly lit.
– The filter reminder appears after 3000 operating hours.

Cleaning and Maintenance

WARNING

Before cleaning or performing maintenance, turn off the unit and unplug it to reduce the risk of electric shock.

1. Replacing the Filter

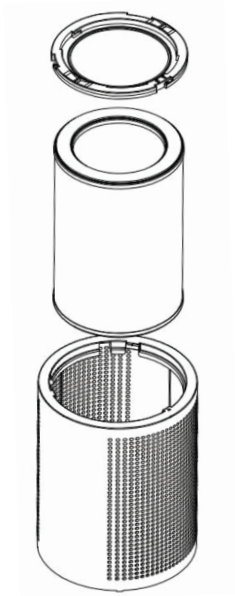


1. Hold the left and right handles of the filter cover with both hands. Rotate the cover until the unlock mark aligns with the triangle mark on the filter assembly, then remove the cover.
2. Remove the filter from the unit.
3. Install the new filter and rotate the filter cover to the locked position.

Note

Avoid using the unit in environments with candles, oil fumes, fireplace soot, or smoke. In such conditions, the filter may require more frequent replacement.

2. Replacing the Wet Curtain

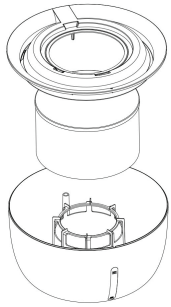

1. Remove the water tank cover.
2. Remove the wet curtain from the unit.
3. Install the new wet curtain and reinstall the water tank cover.

Notes

1. Ensure the correct front and rear orientation of the filter cover during installation.
2. It is recommended to wear gloves when replacing the filter. Place the used filter in a plastic bag before disposal to help prevent secondary pollution.


3. Cleaning the Exterior of the Unit

1. Turn off the unit and unplug it.
2. Wipe the exterior with a soft cloth lightly dampened with mild soapy water.
3. Do not allow water to enter the unit. This may damage the product and cause electric shock.
4. After cleaning, place the unit in a ventilated area to dry. Do not expose it to direct sunlight. Do not power on the unit until it is completely dry.

Fault Analysis and Troubleshooting

Problem	Possible Cause	Solution
The unit does not operate	1. Power is off. 2. Unit is unplugged.	1. Turn on the power. 2. Check the power connection.
Reduced airflow or poor purification performance	1. Air inlet or outlet is blocked. 2. Filter is clogged.	1. Remove any blockage. 2. Clean or replace the filter if necessary.
Poor humidification performance	1. Wet curtain not installed correctly. 2. Water level is too low.	1. Install the wet curtain correctly. 2. Refill the water tank.

٢- استبدال الفلتر المبلل

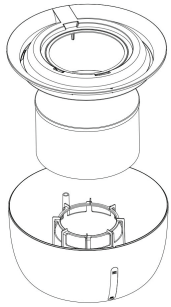

١. قم بإزالة غطاء خزان الماء.
٢. قم بإزالة الستارة المبللة من الوحدة.
٣. قم بتركيب الستارة المبللة الجديدة، ثم أعد تركيب غطاء خزان الماء.

ملاحظات

١. تأكد من صحة اتجاه الأمام والخلف لغطاء الفلتر أثناء عملية التركيب.
٢. يُنصح بارتداء القفازات عند استبدال الفلتر. كما يجب وضع الفلتر المستخدم داخل كيس بلاستيكي قبل التخلص منه لتجنب التلوث الثانوي.

٣- تنظيف الهيكل الخارجي للجهاز

١. قم بإيقاف تشغيل الجهاز وفصل القابس الكهربائي.
٢. امسح السطح الخارجي بقطعة قماش ناعمة مبللة قليلًا بماء وصابون خفيف .
٣. لا تسمح بدخول الماء إلى داخل الجهاز، فقد يؤدي ذلك إلى تلف المنتج أو التسبب في صدمة كهربائية.
٤. بعد التنظيف، ضع الجهاز في مكان جيد التهوية ليجف. لا تعرضه لأشعة الشمس المباشرة، ولا تقم بتشغيله قبل التأكد من جفافه تماماً.

تحليل الأعطال واستكشاف الأخطاء وإصلاحها

المشكلة	السبب المحتمل	الحل
الجهاز لا يعمل	١. انقطاع التيار الكهربائي. ٢. الجهاز غير موصول بالكهرباء.	١. قم بتشغيل مفتاح التشغيل. ٢. تأكد من توصيل الجهاز بمصدر الكهرباء بشكل صحيح.
ضعف تدفق الهواء أو ضعف كفاءة التنقية	١. انسداد مدخل أو مخرج الهواء. ٢. انسداد الفلتر.	١. تأكد من عدم وجود أي عوائق في فتحات الهواء. ٢. قم بتنظيف أو استبدال الفلتر عند الحاجة.
ضعف أداء الترطيب	١. عدم تركيب الستارة المبللة بشكل صحيح. ٢. انخفاض مستوى الماء عن الحد الأدنى.	١. تأكد من تركيب الستارة المبللة بشكل صحيح. ٢. قم بملء خزان الماء حتى المستوى المطلوب.


ملاحظات:

– يصدر صوت تنبيه (بيب) عند كل ضغطة زر.
– في وضع النوم ، إذا وصل الفلتر إلى نهاية عمره الافتراضي، يبقى مؤشر الفلتر مضاءً بإضاءة خافتة.
– يظهر تنبيه استبدال الفلتر بعد ٣٠٠٠ ساعة من التشغيل

التنظيف والصيانة

تحذير
قبل إجراء أي عملية تنظيف أو صيانة، قم بإيقاف تشغيل الجهاز وفصل القابس الكهربائي لتقليل خطر التعرض لصدمة كهربائية.

١-استبدال الفلتر

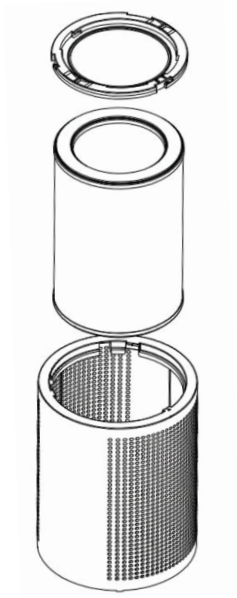

١. أمسك مقابض غطاء الفلتر (اليسار واليمين) بكلتا اليدين، ثم قم بتدوير الغطاء حتى تتطابق علامة الفتح مع علامة المثلث الموجودة على مجموعة الفلتر، وبعد ذلك قم بإزالة الغطاء.
٢. قم بإزالة الفلتر من الوحدة.
٣. قم بتركيب الفلتر الجديد، ثم أعد غطاء الفلتر وقم بتدويره إلى وضع القفل.

ملاحظة
تجنب استخدام الجهاز في بيئات تحتوي على شموع، أو أبخرة زيتية، أو سخام المواقد ،أو الدخان. في هذه الحالات قد يحتاج الفلتر إلى الاستبدال بشكل متكرر.

	المؤقت	١–في حالة تشغيل الجهاز، اضغط على زر المؤقت (TIMER)، وسيضيئ رمز "TIMER". ٢– تعرض الشاشة الرقمية واجهة إعداد المؤقت، ويتم تغيير قيمة الوقت بالتسلسل: ١ – ٢ – ٣ – ١٢ – إلغاء – ١ – ٢ – بشكل متكرر. بعد الإعداد، تعود الشاشة تلقائيًا إلى واجهة عرض قيمة PM٢,٥ بعد ٣ ثوانٍ. بعد ذلك، تعرض الشاشة الرقمية بالتناوب قيمة PM٢,٥ وقيمة المؤقت، مع فترة تبديل قدرها ٥ ثوانٍ. ٣–عند تشغيل العد التنازلي للإيقاف، يتم تقليل الوقت بمعدل ساعة واحدة كل مرة حتى يتم إيقاف الجهاز.	١–في كل مرة يتم فيها الضغط على الزر، يصدر الجرس صوت "بيب".
	وضع السكون	١–في حالة تشغيل الجهاز، اضغط على زر SLEEP للدخول إلى وضع النوم (Night Mode)، وفي هذه الحالة يضيء رمز SLEEP، ويكون العرض نصف سطوع، بينما تنطفئ باقي الرموز على الشاشة (بما في ذلك ضوء عرض جودة الهواء). في وضع النوم، تعمل سرعة المروحة على المستوى الأول فقط. ٢–عند الضغط مرة أخرى على الزر، يتم إلغاء وضع النوم، وتستمر سرعة المروحة في العمل على المستوى الأول، بينما تبقى باقي الوظائف كما هي دون تغيير.	١– في كل مرة يتم فيها الضغط على الزر، يصدر الجرس صوت "بيب". ٢–اضغط على زر وضع النوم (Sleep Mode) للدخول إلى وضع الليل أو الخروج منه. ٣–في وضع الليل، إذا وصل الفلتر إلى نهاية عمره الافتراضي، يظل مؤشر الفلتر مضاءً بنصف سطوع؛ وعند الخروج من وضع الليل يعود مؤشر الفلتر إلى السطوع الطبيعي.
	الأيونات السالبة	في حالة تشغيل الجهاز، اضغط على الزر لتفعيل الأيونات السالبة، وسيضيء الرمز الخاص بها. وعند الضغط مرة أخرى يتم إيقاف الأيونات السالبة وينطفئ الرمز.	١–في كل مرة يتم فيها الضغط على الزر، يصدر الجرس صوت "بيب".
	ضوء الأشعة فوق البنفسجية	١–في حالة تشغيل الجهاز، اضغط على الزر لتشغيل ضوء الأشعة فوق البنفسجية (UVC)، وسيضيئ الرمز الخاص به. وعند الضغط مرة أخرى يتم إيقاف ضوء UVC.	١–في كل مرة يتم فيها الضغط على الزر، يصدر الجرس صوت "بيب".
	إقران Wi-Fi	١–في حالة تشغيل الجهاز، اضغط مع الاستمرار على زر النوم (Sleep) لمدة ٣ ثوانٍ لتفعيل أو إيقاف وظيفة إقران Wi-Fi. عندما يكون رمز Wi-Fi على الشاشة الرقمية مضاءً بشكل ثابت، فهذا يعني أنه تم الاتصال بمركز الخدمة السحابية. وعندما يومض الرمز بسرعة (٠,٢٥ ثانية تشغيل / ٠,٢٥ ثانية إيقاف)، فهذا يدل على أن عملية الإقران قيد التنفيذ. وإذا لم تنجح عملية الإقران خلال ١٢٠ ثانية، ينطفئ الرمز تلقائيًا. ٢–عندما يكون رمز Wi-Fi مضاءً بشكل ثابت أو يومض بسرعة، اضغط مع الاستمرار على زر النوم (Sleep) لمدة ٣ ثوانٍ لإيقاف وظيفة Wi-Fi، وسيتم إطفاء الرمز.	١–في كل مرة يتم فيها الضغط على الزر، يصدر الجرس صوت "بيب".
	إعادة ضبط الفلتر	١–عند وصول وقت التشغيل التراكمي للجهاز إلى ٣٠٠٠ ساعة، يظل مؤشر الفلتر مضاءً (باللون الأحمر) للتنبيه بضرورة استبدال الفلتر. ٢– عند إضاءة مؤشر الفلتر، يرجى الضغط على زري "UV" والأيونات السالبة" لمدة ٣ ثوانٍ لإطفاء المؤشر. في الوقت نفسه، يصدر الجرس صوت "بيب" ثلاث مرات، ويومض مؤشر الفلتر ٣ مرات ثم ينطفئ (كل وميض لمدة ٠,٥ ثانية)، وبعد ذلك يتم إعادة احتساب عمر الفلتر من جديد.	١–لا يمكن إعادة ضبط العمر التراكمي للفلتر عند إيقاف تشغيل الجهاز. ٢–لا يمكن إعادة الضبط عندما لا يكون مؤشر الفلتر مضاءً. ٣–عند إضاءة مؤشر الفلتر، تعمل باقي وظائف الجهاز بشكل طبيعي كالمعتاد.

ملاحظة:


إذا كنت لا تنوي استخدام وظيفة الترطيب، يمكنك تركيب الوحدة الرئيسية مباشرة على هيكل إطار الفلتر.
قم بمحاذاة الجزء الأمامي من الوحدة الرئيسية مع الجزء الأمامي من إطار الفلتر، ثم قم بتدويرها قليلا يميناً ويساراً حتى تستقر بالكامل، وبعد ذلك قم بتدويرها إلى اليسار حتى يتم قفلها في مكانها.

وظائف الأزرار (Function Keys)



التفاصيل موضحة في الجدول أدناه.

المفاتيح الوظيفية	طريقة التشغيل	الوصف التفصيلي	ملاحظة
	تشغيل/ إيقاف التشغيل	١–في وضع الاستعداد، اضغط على زر التشغيل/الإيقاف للدخول إلى وضع التشغيل. ٢–بشكل افتراضي، يعمل الجهاز في وضع التلقائي. ٣–أثناء وضع التشغيل، اضغط على زر التشغيل/الإيقاف للدخول إلى وضع الاستعداد، حيث تنطفئ جميع المؤشرات والأيقونات وتتوقف جميع الوظائف.	١–عند تشغيل الجهاز، يصدر الجرس صوتي "بيب" مرتين. ٢–عند إيقاف تشغيل الجهاز، يصدر الجرس صوت "بيب" مرة واحدة. ٣–عند تشغيل الجهاز، يضيء الضوء الأبيض، بينما يضيء الضوء الأحمر في وضع الاستعداد.
	الوضع التلقائي	١–في حالة تشغيل الجهاز، اضغط على زر الوضع التلقائي (Auto Mode) للدخول إلى الوضع التلقائي أو الخروج منه، ويتم التحكم في سرعة المحرك بواسطة برنامج الجهاز. ٢– في الوضع التلقائي، اضغط على زر السرعة (Speed) للخروج من الوضع التلقائي، وستصبح سرعة المحرك على المستوى الأول.	١–في الوضع التلقائي، يتم تحديد سرعة (درجة) المحرك بناء على جودة الهواء التي يكتشفها المستشعر. ٢–إذا كانت جودة الهواء جيدة، يعمل المحرك بسرعة منخفضة. ٣–إذا كانت جودة الهواء متوسطة، يعمل المحرك بسرعة متوسطة. إذا كانت جودة الهواء سيئة، يعمل المحرك بسرعة عالية.
	سرعة المروحة	١–اضغط على أيقونة السرعة، وستعمل السرعة بالتتابع على المستوى الأول–الثاني – الثالث – الرابع – ثم تعود إلى المستوى الأول، بشكل متكرر ومستمر.	١–في كل مرة يتم فيها الضغط على الزر، يصدر الجرس صوت "بيب".

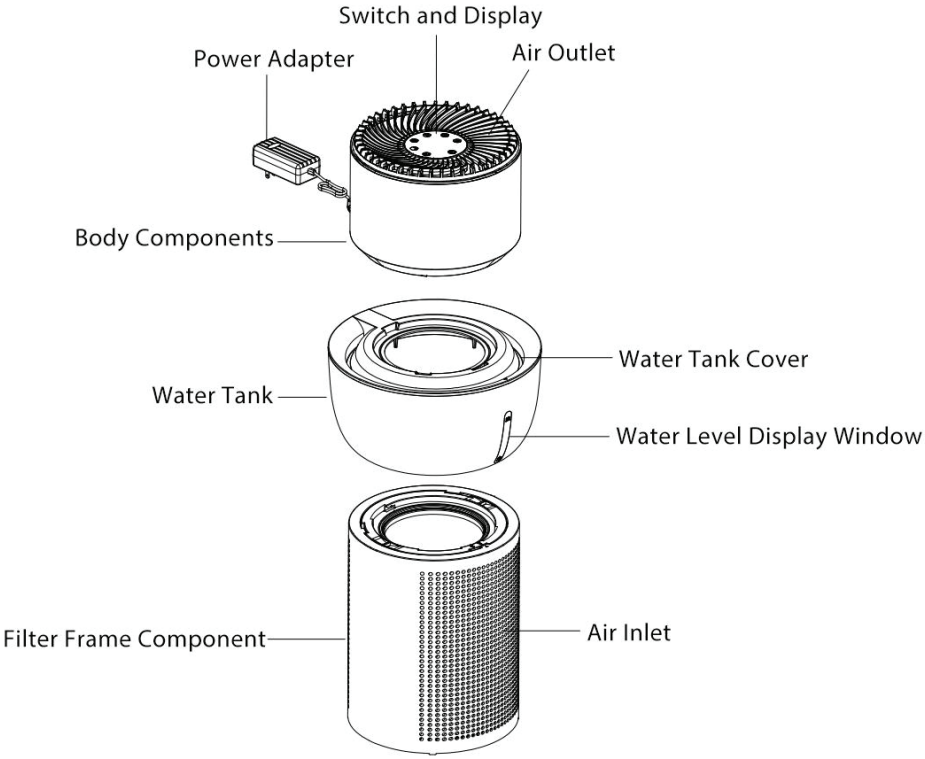

تعليمات المنتج

١. التحضير قبل الاستخدام

١. قبل الاستخدام، قم بإزالة الفلتر ووضعه على الأرض بحيث يكون الجانب الأمامي مواجهًا لك.

٢. قم بمحاذاة الجزء الأمامي من خزان الماء مع الجزء الأمامي من هيكل إطار الفلتر. قم بتدوير خزان الماء قليلاً يميناً ويساراً حتى يثبت بالكامل داخل إطار الفلتر، ثم قم بتدويره إلى اليسار حتى يتم قفله في مكانه.

٣. قم بمحاذاة الجزء الأمامي من الوحدة الرئيسية مع الجزء الأمامي من خزان الماء. قم بتدوير الوحدة الرئيسية قليلًا يميناً ويساراً حتى تثبت بإحكام على غطاء خزان الماء.

٤. املأ خزان الماء، مع التأكد من عدم تجاوز علامة الحد الأقصى لمستوى الماء.

٥. أدخل قابس التيار المستمر (DC) الخاص بمحول الطاقة المرفق في منفذ DC في الجهاز.

٦. قم بتوصيل محول الطاقة بمصدر كهرباء تيار متردد١٠٠–٢٤٠فولت،٥٠/٦٠هيرتز. سيدخل الجهاز إلى وضع الاستعداد.

نظرة عامة على المنتج ووظائفه

كيفية عمل المنتج

يقوم الفلتر بالتقاط واحتجاز الجسيمات المحمولة في الهواء باستخدام تقنية ترشيح عالية الكفاءة.

وظائف المنتج

١. **أوضاع التشغيل:**
٤ سرعات للمروحة، وضع النوم، والوضع التلقائي.

٢. **وضع النوم:**
يعمل بأقل سرعة ويقوم بإطفاء الإضاءة الخلفية للوحة التحكم (باستثناء مؤشر وضع النوم).

٣. **الوضع التلقائي:**
تعرض مؤشرات جودة الهواء ألواناً مختلفة (أحمر / برتقالي / أزرق)، بينما تعرض الشاشة قيمة PM٢,٥ بشكل لحظي.


٤. **وظيفة المؤقت:**
قابلة للضبط من ١ إلى ١٢ ساعة.

٥. **وظيفة الأيونات السالبة.**

٦. **وظيفة الأشعة فوق البنفسجية:**
تساعد في تقليل الروائح ودعم عملية التعقيم.

٧. **وظيفة تذكير استبدال الفلتر وإعادة الضبط.**

٨. **وظيفة الترطيب (اختيارى):**
ترطيب تبخيري مزود بخزان ماء سعة ٣,٥ لتر مع نافذة شفافة لعرض مستوى الماء.

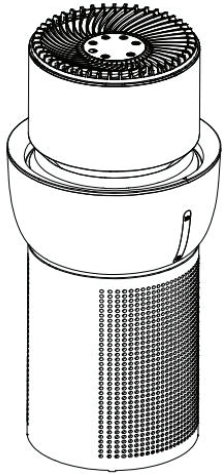

مواصفات المنتج

اسم المنتج	جهاز تنقية الهواء والترطيب
الموديل	HYP-PR-AP01
القدرة	٣٨واط
الجهد الكهربائي والتردد	تيار متردد١٠٠-٢٤٠فولت،٥٠/٦٠هيرتز
أبعاد المنتج	٢٥٢×٤٩٦مم

احتياطات السلامة


تحذير: خطر التعرض لصدمة كهربائية

يرجى قراءة هذا الدليل بعناية قبل استخدام المنتج للمساعدة في منع حدوث قصر كهربائي، أو صدمة كهربائية، أو حريق، أو إصابات شخصية، أو أي أخطار أخرى. يجب تشغيل المنتج دائماً وفقاً للتعليمات الواردة في هذا الدليل.
لتقليل خطر التعرض لصدمة كهربائية، لا تحاول صيانة المنتج إلا كما هو موضح في قسم التنظيف والصيانة.

يرجى قراءة جميع احتياطات السلامة التالية قبل استخدام هذا المنتج.

١. استخدم هذا المنتج فقط مع مصدر طاقة تيار متردد١٠٠–٢٤٠فولت ،٥٠/٦٠هيرتز.
٢. لا تضع سلك الطاقة تحت السجاد أو أي أغطية أخرى. حافظ على السلك بعيداً عن الممرات والأماكن التي قد يتعرض فيها للضغط أو يتسبب في التعثر.
٣. لا تستخدم هذا المنتج في البيئات الدهنية (مثل المطابخ). هذا المنتج غير مصمم لتنقية الأبخرة الزيتية أو الشحوم من الهواء.
٤. لا تستخدم جهاز تنقية الهواء في الحمامات أو البيئات عالية الرطوبة. كما يجب عدم استخدامه بالقرب من المواقد أو الغازات القابلة للاشتعال أو المواد القابلة للاحتراق.
٥. افصل الجهاز عن مصدر الكهرباء عند عدم الاستخدام، وقبل نقله أو تنظيفه أو تركيب/إزالة أي جزء منه.
٦. قم بتشغيل المنتج فقط بعد التأكد من تجميعه وتركيبه بشكل صحيح وكامل.
٧. أوقف تشغيل الجهاز قبل فصل القابس الكهربائي.
٨. قد يؤدي عدم صيانة المنتج وفقاً للتعليمات الواردة في هذا الدليل إلى إلغاء الضمان، وقد يتسبب في إصابة شخصية أو تلف المنتج.
٩. لا تضع سلك الطاقة على أسطح ساخنة. إذا تعرض السلك أو القابس للتلف، توقف عن استخدام المنتج واتصل بمركز خدمة معتمد للفحص أو الإصلاح.
١٠. لا تسحب سلك الطاقة أو تحرك المنتج باستخدام السلك. كما يجب عدم تمرير السلك فوق الحواف الحادة أو الأسطح غير المستوية أو الزوايا.
١١. لفصل المنتج من الكهرباء، أمسك القابس واسحبه برفق من المقبس.
١٢. لا تقم أبداً بفصل القابس عن طريق سحب سلك الطاقة.
١٣. أبقِ الأجسام الغريبة، بما في ذلك الأصابع والشعر والملابس الفضفاضة والمجوهرات، بعيداً عن مخرج الهواء أثناء التشغيل.
١٤. لا تلمس المنتج أو القابس بيدين مبللتين.
١٥. يجب استخدام هذا المنتج من قبل الأطفال فقط تحت إشراف شخص بالغ.

HYPNOTEK

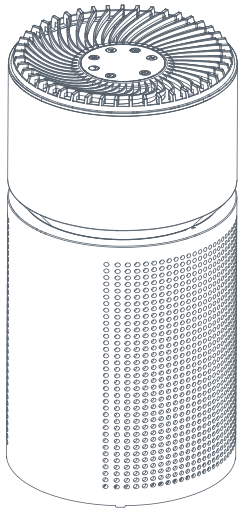

دليل المستخدم

جهاز تنقية الهواء برايت برو

يرجى قراءة دليل التعليمات هذا بعناية قبل استخدام المنتج، والاحتفاظ به في مكان آمن للرجوع إليه مستقبلاً.